Lite Smart
Gives you a bright future

LED PIR SENSOR LIGHT

Model# RS-150

User Manual

I. Loading Battery:

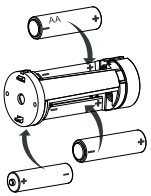

1.Turn left to open the battery cover.
2.Take out the battery core from the body and Load 3 x AA batteries with the correct + , - poles.
Insert the battery core into the body,
Note: Position the channel on the battery core to the flange of the body.
Slide to insert the battery core and screw on to the battery cover.

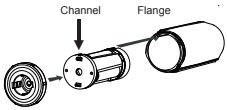

Note: If the battery is loaded correctly, white LED will blink 3 times then stays on "OFF" mode.
Please take out the battery when not in use.

II. Light Mode Selection:

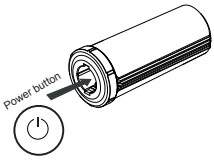

The product offers 3 modes for selection : AUTO PIR sensor light mode, Steady light mode and OFF mode .
Press the button to choose the mode you desire.

Note: As the product has environment light detection, Under AUTO PIR sensor mode, the light only lights up when environment light below 5 lux. (The light will not light up in day time even it detects any motion.)
There is a red LED indicator flickering while on AUTO PIR sensor mode.

III. Installation:

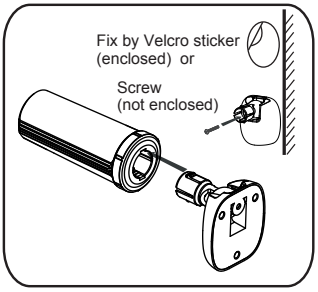

1.You can fix the light stand on the wall or table or shelf by velcro sticker or screw. (screw not enclosed)
2. Press the power botton and set the mode you need and click the light torch into the stand bar.

IV. Sensor Range:

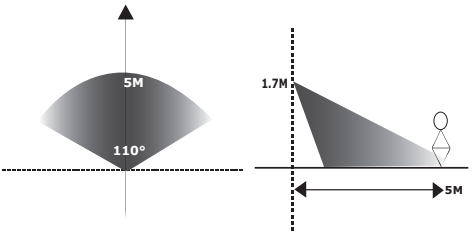

- Fixing height at 1.7M
- The PIR sensor will detect motion when body enter to its range.
- Detection distance will be changed by fixing height.

V. Operation:

Light aiming is adjustable.

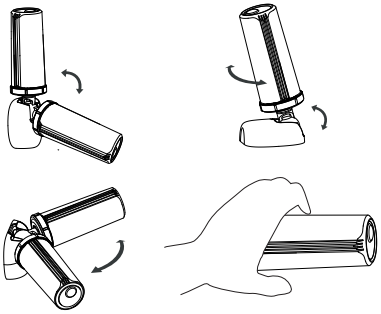

Take out from the stand, use like a torch !

Supplied by
WINNING DEALS M5 3EJ

CE RoHS
Made in China